 


# How to Turn on the Light and to Replace the Telescopic Antenna (if supplied).

 
 
## Lights

The light switch turns on the LED lights on the front of the radio. This switch has three positions. Off, Low, High.

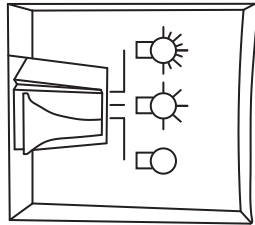

## Telescopic Antenna

If the telescopic antenna breaks, it should be replaced with the wire antenna.

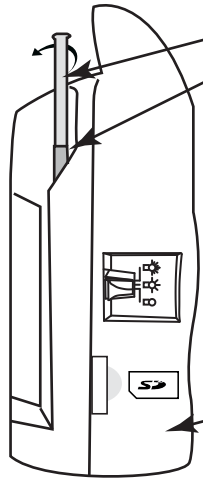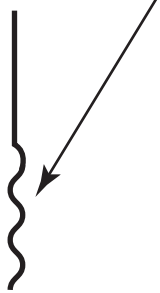


The broken piece of telescopic antenna must be unscrewed (by turning anti-clockwise) and removed from the silver base tube.

Insert the curved end of the wire into the empty base tube


The antenna does not have to be straight up. Move the antenna around to help find the best sound.

 SD card insertion slot

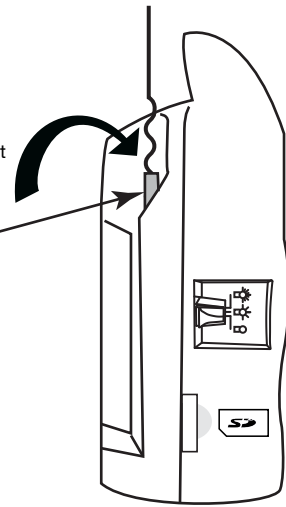

# How to Recharge the Radio from 12V.


 
If 12V power is available either from an adaptor or car battery, use the correct plug with 2.1mm centre pin positive (+), and insert it into the correct hole on the side of the radio. Unplug the 12V power when charging is complete. Do not charge for more than 8 hours.

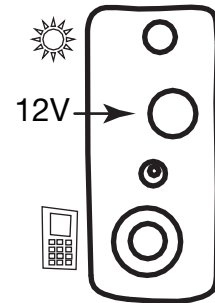

# How to Recharge a Mobile Phone

The radio's power system can also be used to recharge a mobile phone. To do this, the radio battery first needs to be charged. Charge the radio battery by placing the solar panel in the sun for a few hours or by winding the handle for a few minutes.

  1.

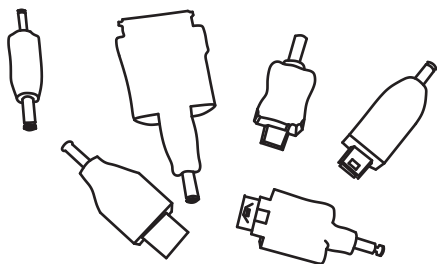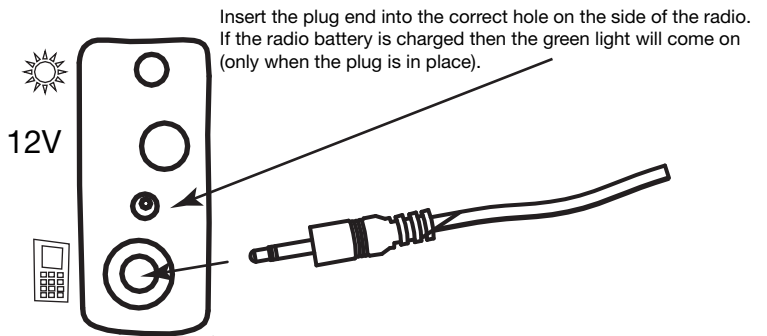


2.

Choose the correct tip for your mobile phone and plug it into the socket end of the cable.

3.

 Connect the mobile phone to the correct tip.

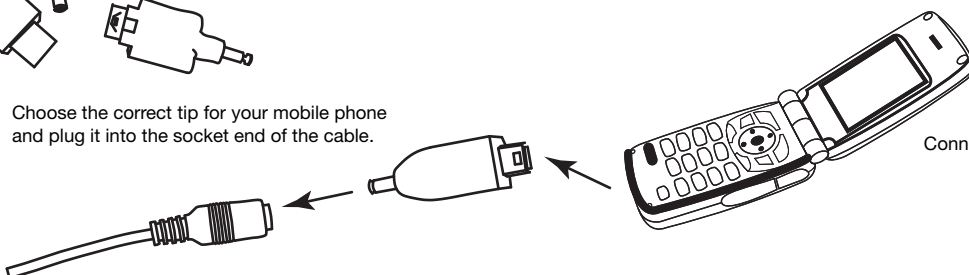

**IMPORTANT! WHEN FINISHED, PULL THE PLUG OUT OF THE RADIO.**